DVD Player KiSS DP-508

Congratulations on your new KiSS DP-508

The many different functions provided by your new DVD Player will be a source of pleasure to you for many years to come. Naturally, you can play and watch DVD films with superb audio and visual quality. You can watch films in many other formats than DVD, such as MPEG-4, XviD, DivX. The audio features also give you the option of playing music CDs, MP3 or Ogg Vorbis files. The DP-508 automatically recognises each format and can read CD-RW and DVD-RW alike. Your new DP-508 also supports Picture CDs (jpg), which means that you can display your photos directly on the TV screen. This includes the pictures developed at the photo shop and any photos you have scanned and saved on a CD yourself.

Note: Do not use the DVD Player until you have studied the quick setup menu. To do so, the DVD Player must be connected to a TV set.

accessories

Make sure the following accessories are included with your DVD Player.

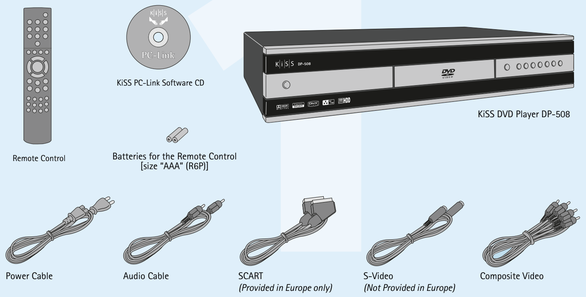

playing medias

The DVD Player supports the following media: DVD Video, DivX, XviD, ISO MPEG-4, Audio CD, MP3, Ogg Vorbis and JPG.

DVD Menu

If you have adjusted your DVD Player according to the instructions above, you can now insert a DVD into your DVD Player. A moment later, the DVD menu will appear. Use the arrow buttons to navigate in the menu and start the fle film.

Note: As this menu is part of the DVD itself, it will vary from one DVD to another.

CD, MP3 and Ogg Vorbis

When you insert an audio CD or a disc with MP3 or Ogg Vorbis files, the player will automatically recognise the format and start playing it. You can use next/previous track or you can use the menu to navigate through the file structure, and select the song you want to hear by pressing enter.

DivX, XviD and MPEG-4

The DP-508 recognises the format and automatically starts playing the CD when you insert it into the drive. Use the counter in the display to help you to see where you are in the film. You have access to the usual playback options, such as stop, pause, go to next, time search, etc.

Photo CD and Jpeg

The DP-508 can show photos on your TV. The photos must be stored in JPEG format on a Disc. The player will automatically recognise the files, and start showing them as a slide show. In the menu you can navigate to find a specific photo, and start the slide show from here by pressing enter.

overview

Discover the player in all its angles

Front panel

The front panel has the standard buttons listed below. When the disk tray is open, push the end of the tray to close it.

1. On/Off
2. CD Tray
3. Open/Close
4. Play/Pause
5. Stop
6. Previous Chapter
7. Next Chapter
8. Rewind
9. Fast Forward
10. Menu

Option on the Setup Menu

11. Enter
12. Navigate Left
13. Navigate Right
14. Navigate Up
15. Navigate Down
16. Close

Back panel

Detailed overview of the back panel



1. Ordinary Stereo Output
2. Composite Video Output for TV
3. S-Video Output for TV
4. Coaxial Output for Amplifier
5. Optical Output for Amplifier
6. SCART for TV
7. AC Input
8. Ethernet

Display

The DVD Player is equipped with a VFD display which indicates the current ongoing activities.



1. Indicates the selection of the disk being played
2. Indicates the track, chapter or program being played
3. Indicates the status on the source or the media playing
4. Indicates the type of media being played

Remote

The Player is delivered with a standard remote control. All the player's functions can be performed from it.

1. Standby
2. Open Close
3. Title/Menu
4. Menu
5. Return
6. Up Arrow
7. Left Arrow
8. Enter
9. Right Arrow
10. Down Arrow
11. Rewind
12. Play/Pause
13. Fast Forward
14. Previous Chapter
15. Stop
16. Next Chapter
17. Select lang/Audio
18. Next Picture
19. Select Subtitle
20. Select Angle
21. Zoom
22. Repeat
23. Unused
24. Setup
25. Delete
26. Search
27. Volume +
28. Volume -

Note:
Certain functions will only work if supported by the media.

webradio

WebRadio enables you to listen to a great number of radio stations via the internet. Remember that all the functions discussed below are only available if your player is properly connected (see connecting section).

Accessing WebRadio

WebRadio, comes as a user friendly way of listening to internet radio on your DP-508 DVD Player. Just select the WebRadio function on the player's main screen.

Listening WebRadio

The WebRadio interface is relatively simple to use. It enables you to browse and select any Internet radio station available. The browsing is done by genre (Pop/Rock, Classical, Jazz...) or by country. Once selected, just press "enter".

Favorites

The radio stations can also be saved in the "favorites" menu, enabling you to reach them quickly.

Help and Info

More info, news about updates and full help will be available from: webradio2.kiss-technology.com

advanced functions

A number of advanced functions are located on the lower section of the remote control. These functions are described below. Some functions may not work with all media formats.

STEP
This function is not used

AUDIO
Press the (AUDIO) button to change the sound format. The audio format options, such as two-channel stereo and six-channel surround, are determined by the film producer.

ZOOM
When watching the film, you can zoom in on specific areas. You can zoom in either as the film is playing or after you have paused it. Activate the function by pressing the (ZOOM) button, and return to the normal picture by pressing the button again.
TIP: Use the arrow buttons to move around the enlarged screen display.

REPEAT
As the film is playing, press the (REPEAT) button and three options will appear on the screen.
MODE: Shuffle (random chapter playing) or Off (deactivated)
Repeat: Lets you decide whether to repeat the section or the entire film.

DELETE
Use this function to delete any files stored on the players' hard disk. To do so, just view the list of items already saved, and select the one to remove.

SRCH
Use (SRCH) to find a specific spot on the disk.
Time: Specify time, minutes and seconds
Title/Chapter: Find the title or the chapter

ANGLE
If the film supports more than one camera angle, you can switch from one angle to another by pressing the (ANGLE) button.

SUBPIC
Use this button to change the film's subtitles. If you press the (SUBPIC) button, a message will appear in the top left corner of the screen indicating the number of available languages and the language that is currently active. If you press the (SUBPIC) button again, you go to the next language option. The number of languages is also determined by the film's producer.

SETUP
If the DVD Player is in the process of showing a film or playing music, press the (SETUP) button to see the available options on the disk. For instance, if you are watching a DVD film, the left-hand side of the screen will show information about the film's length, the number of chapters, the language options and the number of subtitles.

If the DVD player is turned on, but not playing films or other media, pressing this button will take you to a menu, where you can configure your DVD player. Here you can select the default settings for language, sound, video, parental level, etc.

◄– ◄+
These buttons are used for increasing and decreasing the sound volume.

MARK
This button is used to select files for copy or deletion

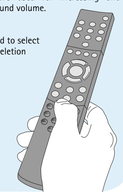

KiSS PC-Link

KiSS PC-Link enables you to connect your computer to your DVD player through the KiSS PC-Link software. You can therefore play, watch or listen to your PC files on your TV via the KiSS DP-508.
Note: Clicking the search function will help your computer to find your multimedia files

Installing the software

The KiSS PC-Link software must be installed on your computer, it is PC compatible and requires a machine running minimum Microsoft Windows 98, Internet Explorer 4. After inserting the disk, the installation program will start automatically, if not double click the "Setup" icon on your CD. Select your preferred language and click "Next". Once the installation is completed, the KiSS PC-Link programme will open. The main window is divided into four folders, Audio, Video, Pictures and Info.

Accessing your files on the DP-508

After connecting your PC to your DP-508 (see Connection Chapter) and entering your computer IP address on your DVD player (see Quick Setup Chapter), press the "Menu" button on your remote control and choose PC-Link. Then from the submenu you can access, Audio, Video or Pictures. If there are more than one computer running KiSS PC-Link, a menu in the player allows you to browse the network for other connected PCs. You can also press the "browse network" icon on the main screen.

KiSS PC-Link Audio Panel

Drag and drop the audio files you would like to access from your DP-508. You can create folders with your favourite music or specific types of music. You can easily add, remove or move the files either by using the window buttons or right clicking on the mouse and select an action.

KiSS PC-Link Video Panel

Drag and drop or select a movie file through the search window. As for the Audio Panel you can define actions by selecting, pressing the window buttons or right-click a file.

KiSS PC-Link Pictures Panel

Direct access to the picture files located on your PC. These can be selected or dragged and dropped. You can also tidy them into a folder from the KiSS PC-link window.

KiSS PC-Link Info Panel

You will find your computer IP address located in this panel. This has to be entered in the last menu of the Quick Setup (see Quick Setup Chapter). This menu also enables you to "Check for Updates" and access the KiSS web site.

connecting

Refer to the illustration below to connect your Player to any video or audio system. The PC to DVD illustration will also show you how to adapt your player to your current network settings.

Video Connection

Connecting your KiSS DP-508 DVD player to your TV can be done with any of the cables below. (Only one cable can be connected at a time)

1. RGB via SCART
2. S-Video *(the cable is an extra accessory)*
3. Composite via SCART
4. Composite Video
5. Component SCART *(the cable is an extra accessory)*

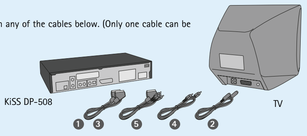

Audio Connection

Connecting your KiSS DP-508 DVD player to your amplifier can be done with any of the cables below. (Only one cable can be connected at a time)

6. Optical output *(the cable is an extra accessory)*
7. Coaxial output *(the cable is an extra accessory)*
8. Analogue Stereo

PC to DVD Connection

Below are four examples of connection for your DP-508 to a PC enabling use of all its features and programmes.

1. Connection to Router with Built-in Switch



2. Connection to Router and Switch

3. Connection to Switch.
(The DHCP Server needs to be installed on the PC)



4. Straight Connection with Cross-Over Cable.
(The DHCP Server needs to be installed on the PC)



Connection with a Router Based Internet Connection (illustration: 1 and 2)

Needed Equipment
1. A router, with a build-in switch or a separate switch/hub.
2. 2 or 3 straight Ethernet cables.
3. A Windows PC with an Ethernet connection.
4. The KiSS PC-link program.

Step by Step Guide
1. Connect both the PC and the player to the router or switch/hub with straight cables
2. Connect the router to the switch/hub via the uplink connection.
3. Install the PC-link program on the PC
4. Check which IP address is given to the PC in the PC-link program under info
5. Insert this IP in the DP-508 and try to connect to the PC-link program

Now the DP-508 should be connected

Possible errors.
- Cable problem, check that there is light in all the ports in the switch/hub
- There is installed a firewall on the PC, that blocks the ports that the PC-link program uses (port 8000 must be open)
- The player and the PC are not on the same subnet (problem with playing video)
- Your Pc has been assigned a new IP address from the DHCP server, which differs form the one enter in the player. (Solution use a static IP on the PC)

Connection without a Router (illustration: 3 and 4)

Needed Equipment
1. Switch/hub and 2 straight cables or a cross cable.
2. A windows PC with an Ethernet connection.
3. DHCP program (ex: Magic DHCP) or a player with firmware 2.7.1 or later.
4. The PC-link program.

Step by Step Guide.
1. Connect the player either straight to the PC with the cross cable or through the switch with the straight cables.
2. Install the DHCP program, configure the program to have and IP range and reboot the computer.
3. Install the PC-link program and make sure that the computer's IP are in the IP-range configured in the DHCP program.
4. Turn on the DP-508 and check in the DHCP program under leases that the player receives an IP
5. Try to connect the player to the PC-link program and stream audio, video or pictures

If you have configured the DHCP program correctly then the player should be able to connect to the PC.

Possible errors.
- Cable problem, check that there is light in all the ports in the switch/hub
- There is installed a firewall on the PC, that blocks the ports that the PC-link program uses (port 8000 must be open)

quick setup

If your DVD Player is correctly connected (see the chapter on cable connections), a menu will appear when you turn on the DVD Player. The menu installs the most important settings for your TV set and language.
Note: If this menu does not appear when you start the DVD Player, recheck the cable connections.
Note: Try connecting your TV set using the Composite Video cables. Composite Video always produces a picture.

1 *Language*

Select the language that will be used whenever you open the DP-508's built-in menus. Use the arrow buttons on the remote control to move the rectangular frame to the language you wish to select and press ENTER.

2 *Video*

Select the video connection your DVD Player is plugged with. Your options are SCART, S-Video or Component video. Composite video is always available, but the quality level is not as good as the other connections.

3 *TV*

This screen presents two different types of TV formats: 4:3 (normal) or 16:9 (wide screen).

Note: Some 4:3 TV screens can display 16:9 format.

4 *Audio*

If your TV set is connected via SCART, your TV is automatically provided with sound. If you would rather use an amplifier to reproduce the sound, you have two options to choose from: the phono jack or one of the two digital outputs.

Note: The default Audio choice should be stereo unless your player is connected to a digital amplifier

5 *IP Address*

In order to use the KiSS PC-Link software, you need to provide your DVD player with your computer IP address. To easily find this number, first install the KiSS PC-Link software on your computer. Once this step is completed, you will find the number under the Info Panel. Type it on the provided screen. Leave it blank if you do not want to set up your PC connection for the moment. You can always go back to the quick setup menu if you want to provide the IP address at a later stage.

You can always go back and start again if you happen to do something wrong. Just press on the setup button of your remote, go to miscellaneous settings and select Quick Setup.

Note: Your KiSS PC-Link software will ONLY work if the KiSS DP-508 is provided with a valid IP address.

advanced setup

You can always access the Setup menu and adjust the DP-508 to your specific requirements and hardware. Select "Setup" from the main screen or press the SETUP button on your remote control, and a menu will appear with the available options. The orange frame shows your position on the menu. Use the arrow buttons to move the frame and select by pressing the ENTER button. The settings on some of the menus have already been determined under Quick setup, but there are several settings available under Advanced setup as well.

Language Settings

The first menu is the Language settings menu. Here you select the language you wish to use for the menus, that will appear on the screen, and your preferred language when playing a DVD film – for subtitles, speech and menus (they will only be used if the film supports the language).

Audio Settings

KiSS has tuned the product to give you the best possible sound experience (Loudness). Under acoustic setup, you can neutralize these settings or enhance them further by selecting dynamic sound. Speaker size is used to make the right bass management. When using small front speakers, try to place the subwoofer between the front speakers. Speakers level let you change the level on the speakers individually. Select the channel you want to change and use the volume buttons to adjust up and down.

Video Settings

You can select the TV type (16:9 or 4:3 aspect ratio), video system (Pal or NTSC) and video output (Scart, S-Video, Component Video or Component Progressive (Progressive Scan)). Composite video is available in all modes except in progressive scan mode. Component Progressive delivers the best video quality, but be aware that if your TV does not support Progressive Scan the picture (and menu) will disappear. You can reset this to the factory settings by pressing: LOAD, INFO, 1, 2, 3 on the remote control.

Miscellaneous Settings

This display lets you set your preferred level of protection on the films. Some films are divided into levels, so that parents can prevent their children from seeing a specific type of film. In the next menu item, you create a password that is required for editing this setup*. The light in the DVD Player's display can be modified from max to normal to min or off. All settings can be reset in the "Restore settings" menu, and the Quick setup can be re-initiated from the last menu.
*If you wish to modify this setup later on, you must re-enter the password.

Note: Progressive scan only works on Component video output. This connection gives the best video quality. Only select Component Progressive if your TV supports it. To leave a menu, press the left arrow on the remote control.

hard disk functions

KiSS DP-508 holds an 80GB Hard Disk enabling you to store Audio/Video/Picture content on it. Only computer generated files can be stored on the Hard Disk. DVDs, Audio CDs, SVCDs (all type of SVCDs), VCDs can not be copied.

Access the Hard Disk
The DP-508 is equipped with a built-in 80GB Hard Disk. To access it, select the Hard Disk icon on the main screen. You can now make you selection between playing video, listening to audio, view pictures or view hard Disk's infos.

Copying files on the Hard Disk
There are two ways of copying files on the DP-508's Hard Disk.
1. From a CD. Insert a CD in the Player's drive. The DP-508 will automatically recognise the format and start to play the disc's content. Press the "Menu" button on the remote to access the list of files stored on the CD, select the file(s) to copy using the "Mark" button, and press the "Enter" button on the remote. This will instantly copy the file from the CD to the Hard Disk. If the CD contains MP3 files, there is no need to press the "Menu" button on the remote, as the list of files will appear automatically.
2. From PC-Link Software. Once PC-Link is correctly running (see the connection and PC-Link sections for details). Press the "Menu" button on the remote, choose KiSS PC-Link from the left list of icons. Make your selection between audio/video/picture files, and choose the file to be copied using the "Mark" button. Once selected, hit the "Enter" button from the remote. The file is being copied from the PC to the Player over the network.
In these two cases, both files or folders can be copied.

Deleting files on the Hard Disk
To delete files on the hard Disk, press "Menu" on the remote to access the hard Disk functions. Choose within Audio/Video/Picture the file to delete. Once selected, press the "Delete" button of the remote. The file will instantly be removed.

Getting infos and Formatting the Hard Disk
To format the hard Disk (Erasing all its content). Press "Menu" on the remote control, and, choose Hard Disk from the left list of icons. The Player will ask you to choose between Audio/Video/Picture or Info. Select info. This menu shows you how much space available the hard Disk holds. An option, at the bottom also enables you to "Clean the Hard Disk" (Format). Selecting this function will erase all content stored on the Players Hard Disk.

software update

KiSS players get regularly updated enabling new functions or improvements. An internet connection and a CD Burner are required for this operation

Getting the Firmware

KiSS Players firmware updates can be found on KiSS Technology's home page. Under www.kiss-technology.com, "end user" section, then "support". Once on the support page, choose "upgrade". Select the player to upgrade from the list, and choose between PAL (Europe and Asia) or NTSC (US and Japan). The file should download on the PC's Hard Disk. KiSS recommends Nero if burning the CD on a PC and Toast if burning on a Mac. The file is a Disc Image and has to be burnt as such. Make sure that "Disc at Once" and "Finalize CD" in Nero are selected or "Write Disc" and "Verify CD" in Toast are enabled. If not, an error could occur while updating the player. More info are available in the "How to Burn" Section of the Support Page.

Updating the Player

Once the CD is burnt with the firmware update, it needs to be loaded in the player which will read it. A message will come up on the screen asking to restart the DVD Player. This should be done from the on/off button on the front panel. The CD is being loaded, this action might take a little time. The Firmware Update Screen comes up on the TV, and two options can be selected, Full Update or Partial Update. Full update, updates the firmware and resets the player to its factory settings. Partial Update, only updates the firmware. KiSS recommends users to use Full Update. The player is being updated, which might take up to a minute. Restart is needed. To verify if the player has been well updated, once it's back up, press "Setup", the number of the current firmware is written on the top left corner of the screen.

support

More information or assistance is available at KiSS Technology's website under End User/Support/After sales for DVD Player.
Address: www.kiss-technology.com

Resetting
To reset the settings of the DP-508, press the following buttons on the remote control: "Open", "Clear", "1", "2", "3". KiSS Technology A/S reserves the right to change all settings and specifications without notice.

Important safety information
- Read these instructions carefully and pay attention to all warnings and guidelines.
- Do not overload electrical sockets or extension cables. Overloading can result in fire or electric shock.
- Never insert objects into the DVD player's cabinet door. They might come into contact with dangerous voltage points or short-circuit components, which can cause fire or electric shock.
- Do not spill liquids on the DVD player.
- If the DVD Player does not function normally, or if it emits unusual sounds or odours, pull out the plug immediately and contact an authorised technician.
- Do not attempt to service the DVD player yourself. If you open or dismantle the shielding, you expose yourself to dangerous voltage and other hazards. All maintenance must be carried out by qualified service technicians.

Environmental information
- The system is made of recyclable materials which can be reused if disassembled by authorised personnel.
- Please follow local regulations for the disposal of packaging materials, used batteries and discarded units.

Copyright
This product contains copyright technology which is protected pursuant to the patents that are the property of Macrovision Corporation and other copyright holders. Any use of this copyright technology must be approved by Macrovision Corporation. The technology is intended for use in the home unless otherwise approved by Macrovision Corporation. Breakdown and disassembly are prohibited.
Made under license from Dolby Laboratories. "Dolby" and the double "D" symbol are trademarks of Dolby Laboratories. "DTS" and "DTS Digital Out" are trademarks of Digital Theater Systems, Inc.

Warranty certificate
KiSS provides a twenty-four (24) month warranty from the date of purchase against material and manufacturing defects. For defects covered by the warranty, the product must be returned to the dealer that sold the product.

Terms of Warranty
1. The warranty is only valid on presentation of the original sales receipt, and if the serial number on the product is fully legible.
2. The obligations of KiSS are limited either to repair or replacement of defective components. The repair or replacement of defective components is based on an assessment by KiSS. Exchange is only possible if the repair cannot be performed.
3. Warranty repairs must be carried out by an authorised KiSS dealer, or an authorised service centre. No remuneration is provided for repairs performed by unauthorised workshops. Any repairs or damage to the product caused by unauthorised intervention are not covered by this warranty.
4. This product will not be considered as being defective, either in materials or in manufacture, if adaptation to national, local, technical or safety-related requirements is required in countries other than the specific country for which the product was originally designed and manufactured.
5. This warranty does not cover these types of adaptations, and no remuneration will be offered for these types of adaptations or for any consequential damages. The warranty does not cover the following:
   a) Periodic inspection, maintenance and repair or replacement of parts resulting from normal wear.
   b) Costs connected to transport, disassembly or installation of the product.
   c) Misuse, including use for purposes other than was intended, or faulty installation.
   d) Damage caused by lightning, water, fire, natural catastrophes, war, insurrection, incorrect line voltage, insufficient ventilation or other causes outside of the control of KiSS.
6. This warranty applies to every legal owner of the product during the warranty period.

Packaging
If possible, use the original packing material for any shipping. Otherwise, repack the DP-508 using:
- A reinforced cardboard box, strong enough to carry the weight of the product.
- At least 6 cm / 2.36 inches of shock-absorbing material around the product.
- Nonabrasive dust-free material for the other parts.
- Nonabrasive wrapping for the product. (Dust and dirt cover)
- Repack the product in such a way as to ensure that it cannot shift in the box during transport.
- No other alternative will be accepted

Information we must receive before repairing the product:
Model name: KiSS DVD Player DP-508
Serial no.:
Fault description (if possible):
Copy of the invoice or sales receipt
The dealer's name, address and phone no.
Personal information: Name, address, post code/city, phone no. and e-mail address (optional).
Your signature
Dealer's stamp and signature
Date

KiSS Technology A/S, Slotsmarken 10, DK 2970 Hørsholm, Denmark
Hotline (user support) +45 45 17 00 07
hotline@kiss-technology.com

All contacts with KiSS Support should be addressed in English

KiSS
enjoy...
www.kiss-technology.com

DVD films are normally supplied with a regional code (1), (2), etc., and can only be played on DVD players/Players with the same regional code. You can see the region on the back of the player. Region tags appear as follows: